

allegro²

bumperkit



replacement instructions

Instructions for replacing the bumpers are the same whether you are replacing them on an Allegro² or an Allegro³, hereafter referred to as the Allegro.

Copyright April 2019, Juniper Systems, Inc. Information is subject to change without notice. Juniper Systems, Allegro², and Allegro³ are trademarks of Juniper Systems, Inc.

Kits: 25073, 25074



Contents of the Allegro²/Allegro³ Bumper Replacement Kit

The Allegro bumper replacement kit includes the following items:

- One bumper for the top and one bumper for the bottom
- Six #2–28 plastite screws
- Instruction sheet

A small Phillips screwdriver will be needed.

Remove the Bumpers

Be sure to back up all data and power off the unit before removing bumpers.

⚠ CAUTION: The Allegro is not sealed against water and dust when the doors are not installed.

1. Unscrew and remove the expansion pod door and the battery door from the unit.
2. Remove the hand strap from the attachment point on the bottom of the Allegro.
3. Remove the screws from the bumpers—two on the top and four on the bottom.
4. Remove the bumpers from the unit.

Note: It is not necessary to remove the connector protector.

Install the Top Bumper

The Allegro top bumper is designed with a hook for the small catch at the top of the Allegro case.



1. Slide the bumper on front to back, making sure the hook engages the catch.
2. Place the tabs in the slots on the side of the unit.
3. Screw the bumper to the unit, using two of the provided screws.
4. Replace the expansion pod door.



Install the Bottom Bumper

The bottom bumper also has a hook to match the catch on the bottom of the Allegro (see image for top bumper).

1. Slide the bumper on front to back, making sure the receptacle engages the hook.
2. Place the tabs in the slots on the side of the Allegro (see image for top bumper).



3. Screw the bumper to the unit using four of the provided screws.
4. Replace the hand strap.
5. Replace the battery door.