Release Notes for Geode Connect – Version 1.1.0

August 2016

These notes provide important information for Juniper System's release of Geode Connect 1.1.0. This version adds new features to allow the configuration of the internal U-Blox receiver on the Mesa 2.

Documentation and software updates are available from:

http://www.junipersys.com/Juniper-Systems/support

Important Notes

Geode Connect 1.1.0 is a configuration application that can configure both Geode GNSS receiver and the Mesa 2 Internal U-Blox receiver. Running Geode Connect on the Mesa 2 now supports connecting to the Internal GNSS receiver so that changes can be made to the Environment Mode, Update Rate, NMEA Sentences, NMEA Talker ID, Binary Messages, Elevation Mask Angle, SBAS Modes, SBAS Services, Static Hold settings, GNSS Constellations, Factory Reset.

PN 26331-00 © Copyright 2016. Juniper Systems, Inc. All rights reserved.

Windows is a registered trademark of Microsoft, Inc. in the United States and/or other countries. Other trademarks in this document are the property of their respective owners.

NOTE for Mesa 2 owners who purchased prior to August 2016

Mesa 2 hardware that was manufactured prior to August 2016 used defaults for the uBlox NEO M8 receiver that caused the receiver to not immediately indicate changes to the current position. To correct these misconfigurations please note the following (not necessary if your Mesa 2 was manufactured after August 2016):

How to reset Mesa 2 Default GNSS settings

Instructions for use with built-in GNSS in Mesa 2

The original default settings for the built-in uBlox GNSS receiver in the Mesa 2 were optimized for vehicle navigation rather than pedestrian tracking. To use Geode Connect 1.1.0 or higher to apply better settings for pedestrian tracking, follow these steps.

- 1. Download Geode Connect 1.1.0 from the Juniper Systems website. Run the .exe file and follow the on-screen steps to install.
- 2. At the "Connect Device" screen select the "Internal Receiver..."
- 3. Once connected, tap on the round Settings (gear) icon > Advanced bar.
- 4. Once you are at the "Configure Internal GNSS" screen looking at the advanced settings, scroll to the very bottom and tap on the "Reset Receiver" button.
- 5. At the "Factory Reset" warning message, tap on the "Restore Defaults" button.

PN 26331-00 © Copyright 2016. Juniper Systems, Inc. All rights reserved.

Windows is a registered trademark of Microsoft, Inc. in the United States and/or other countries. Other trademarks in this document are the property of their respective owners.