

# archer<sup>2</sup> archer<sup>3</sup>

## bumperkit



replacement instructions

Instructions for replacing the bumpers are the same whether you are replacing them on an Archer<sup>2</sup> or an Archer<sup>3</sup>.

Copyright January 2023, Juniper Systems, Inc.  
Information is subject to change without notice. Juniper Systems, Archer<sup>2</sup>, and Archer<sup>3</sup> are trademarks of Juniper Systems, Inc.

Kits: 24080, 24081, 24082, 24083



tel: 435.753.1881 | web: [www.junipersys.com](http://www.junipersys.com)

1132 W. 1700 N. Logan, UT 84321

### Contents of Archer<sup>2</sup>/Archer<sup>3</sup> Bumper Replacement Kit

Depending on the type of unit, the bumper replacement kit may include either top bumper.

- Standard unit: One bumper for the top and one bumper for the bottom
- Barcode unit: One top bumper with a viewing window for the barcode reader and one bumper for the bottom
- Instruction sheet

### Remove the old bumpers

1. Pull one front corner of the bumper away from the unit.
2. Pull the bumper off the unit.

### Install the new bumpers

The replacement bumpers are designed with a small tab inside the front corners of the bumper. This must fit inside the mating hole on the unit.



1. Place one front corner of the bumper slightly above the front corner of the unit as seen below.
2. Push the bumper down so that the tab is inserted into the mating hole.



3. Press the first back corner of the bumper into the unit.
4. Press along the front and back edges of the bumper to seat them into the unit.
5. Press the second back corner into the unit.
6. With the rest of the bumper seated, lift and fold back the second front corner of the bumper to expose the tab inside.
7. Pull and stretch the bumper so that the front corner can be positioned slightly above the second front corner of the unit.
8. Once positioned, insert the tab into the mating hole.
9. Remove and replace the remaining bumper in the same manner.



P/N: 24079-02