

archer² archer³

handstrapkit



replacement instructions

Instructions for replacing the hand strap are the same whether you are replacing it on an Archer² or an Archer³.

Copyright December 2022, Juniper Systems, Inc. Information is subject to change without notice. Juniper Systems, Archer², and Archer³ are trademarks of Juniper Systems, Inc.

Kit: 24075



tel: 435.753.1881 | web: www.junipersys.com

1132 W. 1700 N. Logan, UT 84321

Contents of Archer²/Archer³ Hand Strap Replacement Kit:

The hand strap replacement kit includes the following items:

- Replacement hand strap
- Instruction sheet

Tools required

- Scissors
- Small needle-nosed pliers

Remove the old hand strap

1. Remove the top bumper from the unit.
2. Remove the old strap by cutting it on both sides of the stylus holder and pulling the pieces through the clip bars on the top and bottom of the unit.

Install the new hand strap


1. Loosen the four screws on the battery door, but leave the door loosely in place.
2. Lay the new hand strap on top of the unit with the stylus holder facing up.




3. Flip the hand strap lengthwise toward the top of the unit.
4. Push the end of the hand strap into the top clip bar.



5. Once the strap end is under the clip bar, pull it through with pliers.
6. Pull the hand strap until the overhanging seam seats in the clip bar.
7. Position the battery door above the unit with the open side facing the crown of the unit and the clip bar on top.
8. Insert the other end of the hand strap into the clip bar of the battery door and pull it through with pliers.

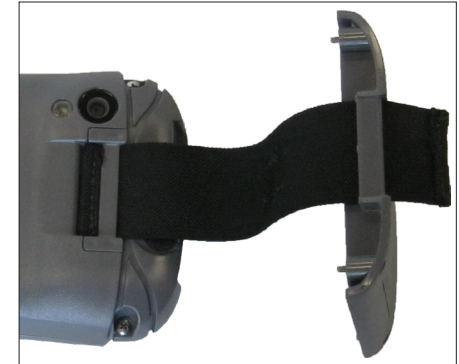

9. Pull the hand strap back through the clip bar to securely seat the overhanging seam.
10. Flip the battery door over the unit and screw the door in place.

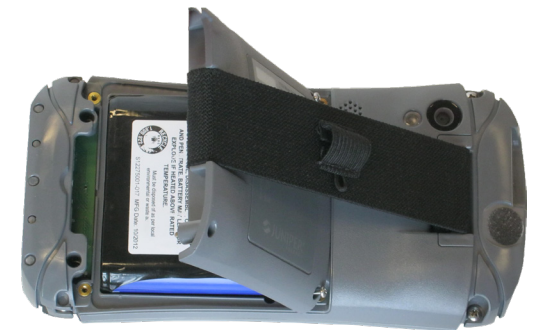

11. Replace the top bumper.

P/N: 24074-02