


archer²_{TM}

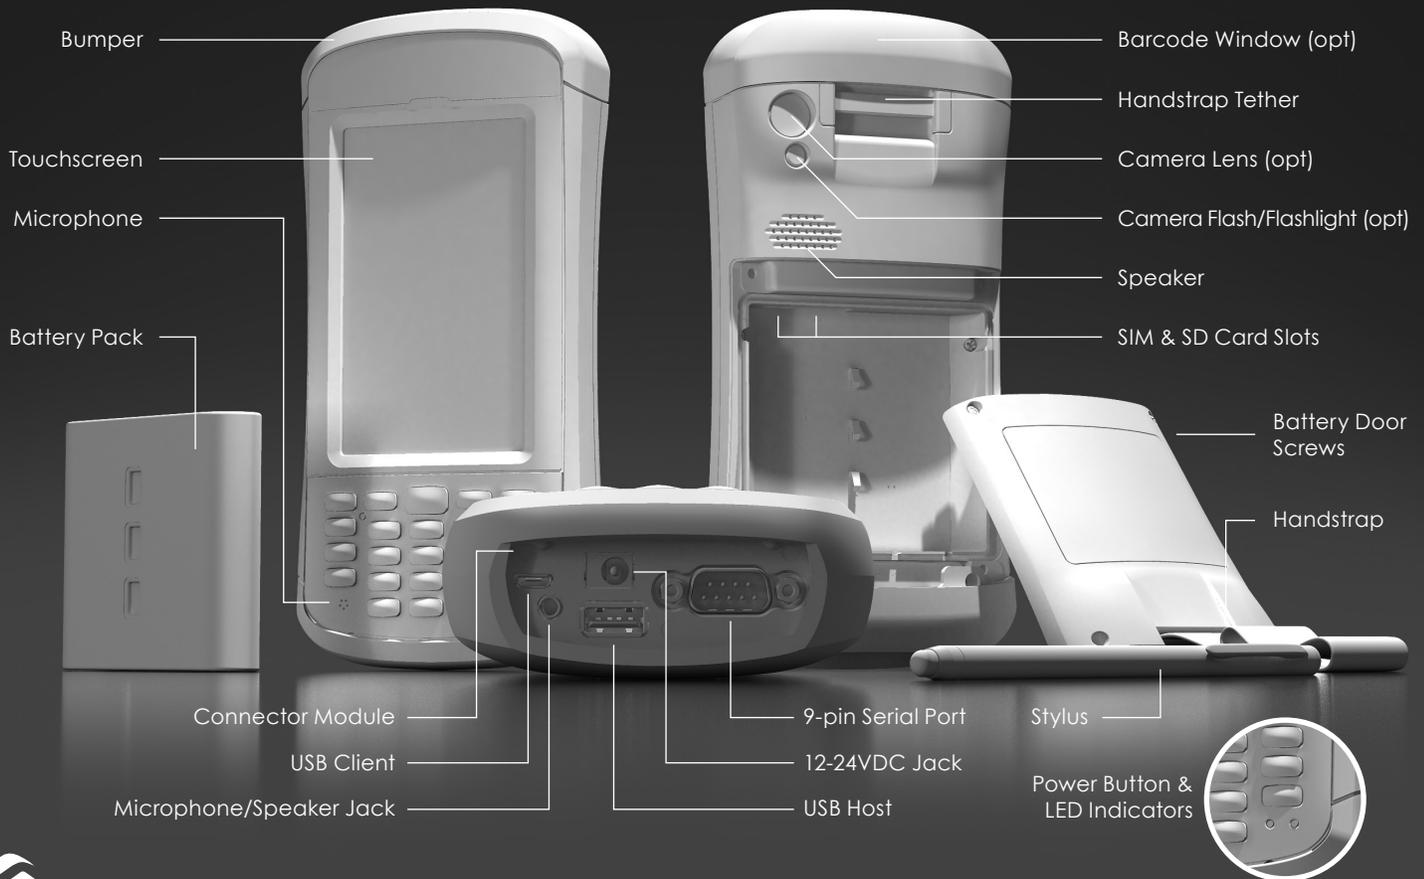

Perform Initial Tasks

- 1 Loosen the 4 captive screws on the battery door with a #1 Phillips screwdriver. Remove the door.
CAUTION: The handheld is not sealed when the door is removed.
- 2 Place the battery pack into the compartment. Be sure to line up the + and -.
- 3 Replace the battery door and tighten the screws.
- 4 Plug the AC power charger into a wall socket and the DC jack on the handheld.
- 5 The handheld powers on and several screens appear. When the Time screen is shown make adjustments if needed and select OK.
- 6 Charge the battery pack at room temperature for 5 hours.



The operating system, manual and quick start guide is available in English, Spanish, French, German, and Brazilian Portuguese. Go to our website at www.junipersys.com/Archer-2/support.