

# geode™

## QUICK START GUIDE

### To charge your Geode Receiver:

1. Attach the included USB cable to the charger.
2. Plug the wall charger into an AC receptacle.

Note: use only the USB charger and cable provided.

3. Insert the micro USB end into the Geode Receiver.
4. Allow four to five hours for a complete charge.



#### 1 Status LEDs

- DGPS Fix (Yellow)—blinking, GPS fix; solid, DGPS fix
- Bluetooth Connected (Blue)
- Battery Charge (Red)—Solid, battery charged; slow blink, charging; fast blink, charge error
- Power (Green)—Solid, power on; blinking, battery low

#### 2 Power Button

- 3 External Antenna Connection
- 4 USB Connection

Geode Connect™ software for Windows® Mobile, Windows® tablet, or Android devices, as well as the Geode Receiver owner's manual, is available from our website, [www.junipersys.com](http://www.junipersys.com).

