

Field PC Cap Replacement Instructions

These are instruction on replacing the Field PC's top and bottom caps.

Included in this packet:

- Top cap
- 2 top cap screws (large)
- Bottom cap
- 4 bottom cap screws (small)

1. Use a screwdriver to remove the two screws located at the top of the Field PC. Remove top cap.
2. Use a screwdriver to remove four screws, two on each side. Remove bottom cap.
3. Place new bottom cap on Field PC and use the four new screws (small), two on each side, to attach cap.
4. Slide new top cap onto unit, make sure side tabs fit in bottom cap, and use the two (large) screws to attach cap.

P/N 22395-00 05/09

Field PC Cap Replacement Instructions

These are instruction on replacing the Field PC's top and bottom caps.

Included in this packet:

- Top cap
- 2 top cap screws (large)
- Bottom cap
- 4 bottom cap screws (small)

1. Use a screwdriver to remove the two screws located at the top of the Field PC. Remove top cap.
2. Use a screwdriver to remove four screws, two on each side. Remove bottom cap.
3. Place new bottom cap on Field PC and use the four new screws (small), two on each side, to attach cap.
4. Slide new top cap onto unit, make sure side tabs fit in bottom cap, and use the two (large) screws to attach cap.

P/N 22395-00 05/09

Field PC Cap Replacement Instructions

These are instruction on replacing the Field PC's top and bottom caps.

Included in this packet:

- Top cap
- 2 top cap screws (large)
- Bottom cap
- 4 bottom cap screws (small)

1. Use a screwdriver to remove the two screws located at the top of the Field PC. Remove top cap.
2. Use a screwdriver to remove four screws, two on each side. Remove bottom cap.
3. Place new bottom cap on Field PC and use the four new screws (small), two on each side, to attach cap.
4. Slide new top cap onto unit, make sure side tabs fit in bottom cap, and use the two (large) screws to attach cap.

P/N 22395-00 05/09

Field PC Cap Replacement Instructions

These are instruction on replacing the Field PC's top and bottom caps.

Included in this packet:

- Top cap
- 2 top cap screws (large)
- Bottom cap
- 4 bottom cap screws (small)

1. Use a screwdriver to remove the two screws located at the top of the Field PC. Remove top cap.
2. Use a screwdriver to remove four screws, two on each side. Remove bottom cap.
3. Place new bottom cap on Field PC and use the four new screws (small), two on each side, to attach cap.
4. Slide new top cap onto unit, make sure side tabs fit in bottom cap, and use the two (large) screws to attach cap.

P/N 22395-00 05/09