

## **Regulatory Information**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by the manufacturer could void the radio frequency compatibility and wireless compliance and negate your authority to operate the product. The use of non-compliant peripheral devices could cause the emission of radiation is are not within the limits set by part 15 of the FCC rules. Only use peripheral devices that have been tested to provide electromagnetic compatibility when connected to this unit.

## **Exposure to Radio Frequency (RF) Signals**

Your device contains a radio transmitter and receiver. The radiated output power is far below the international radio frequency exposure limits. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

 
The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in usage.

As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Your device has an internal antenna. Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards; always use your device only in its normal-use position. Do not touch or hold the antenna area unnecessarily when placing or receiving a phone call. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.


# QUICK START GUIDE FOR CEDAR TREE TECHNOLOGIES CT7 TABLET

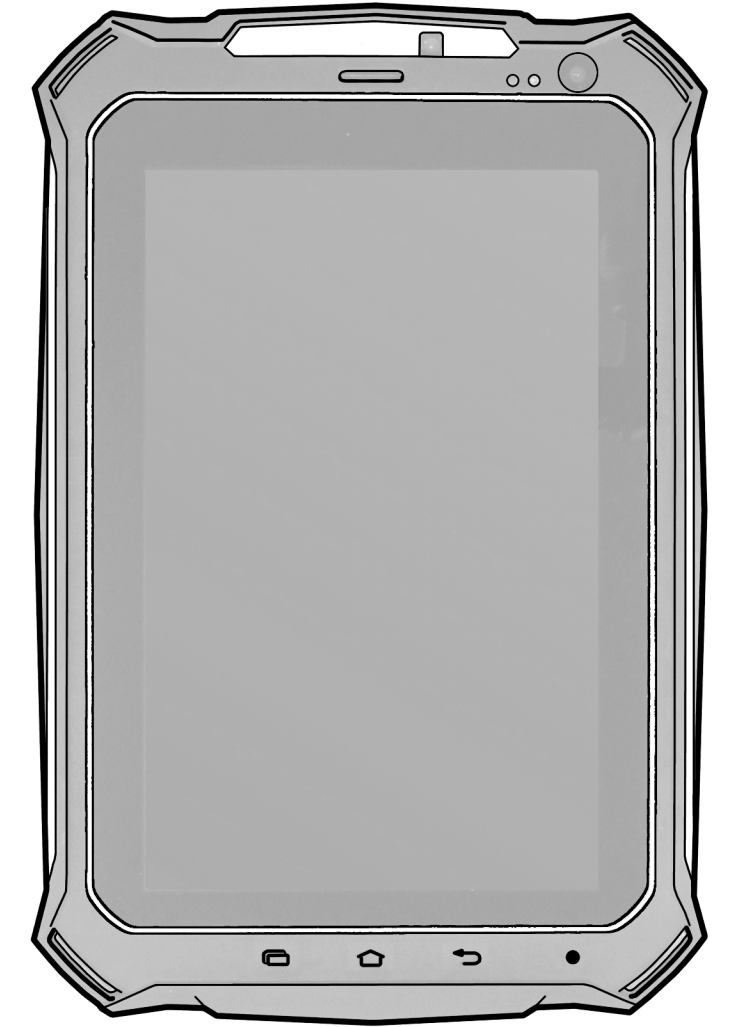


Cedar Tree Technologies

1220 NW Kings Blvd • Corvallis, OR 97330 • 541-230-1206  
support@cedartreetechnologies.com • www.cedartreetechnologies.com/support


## Buttons and ports

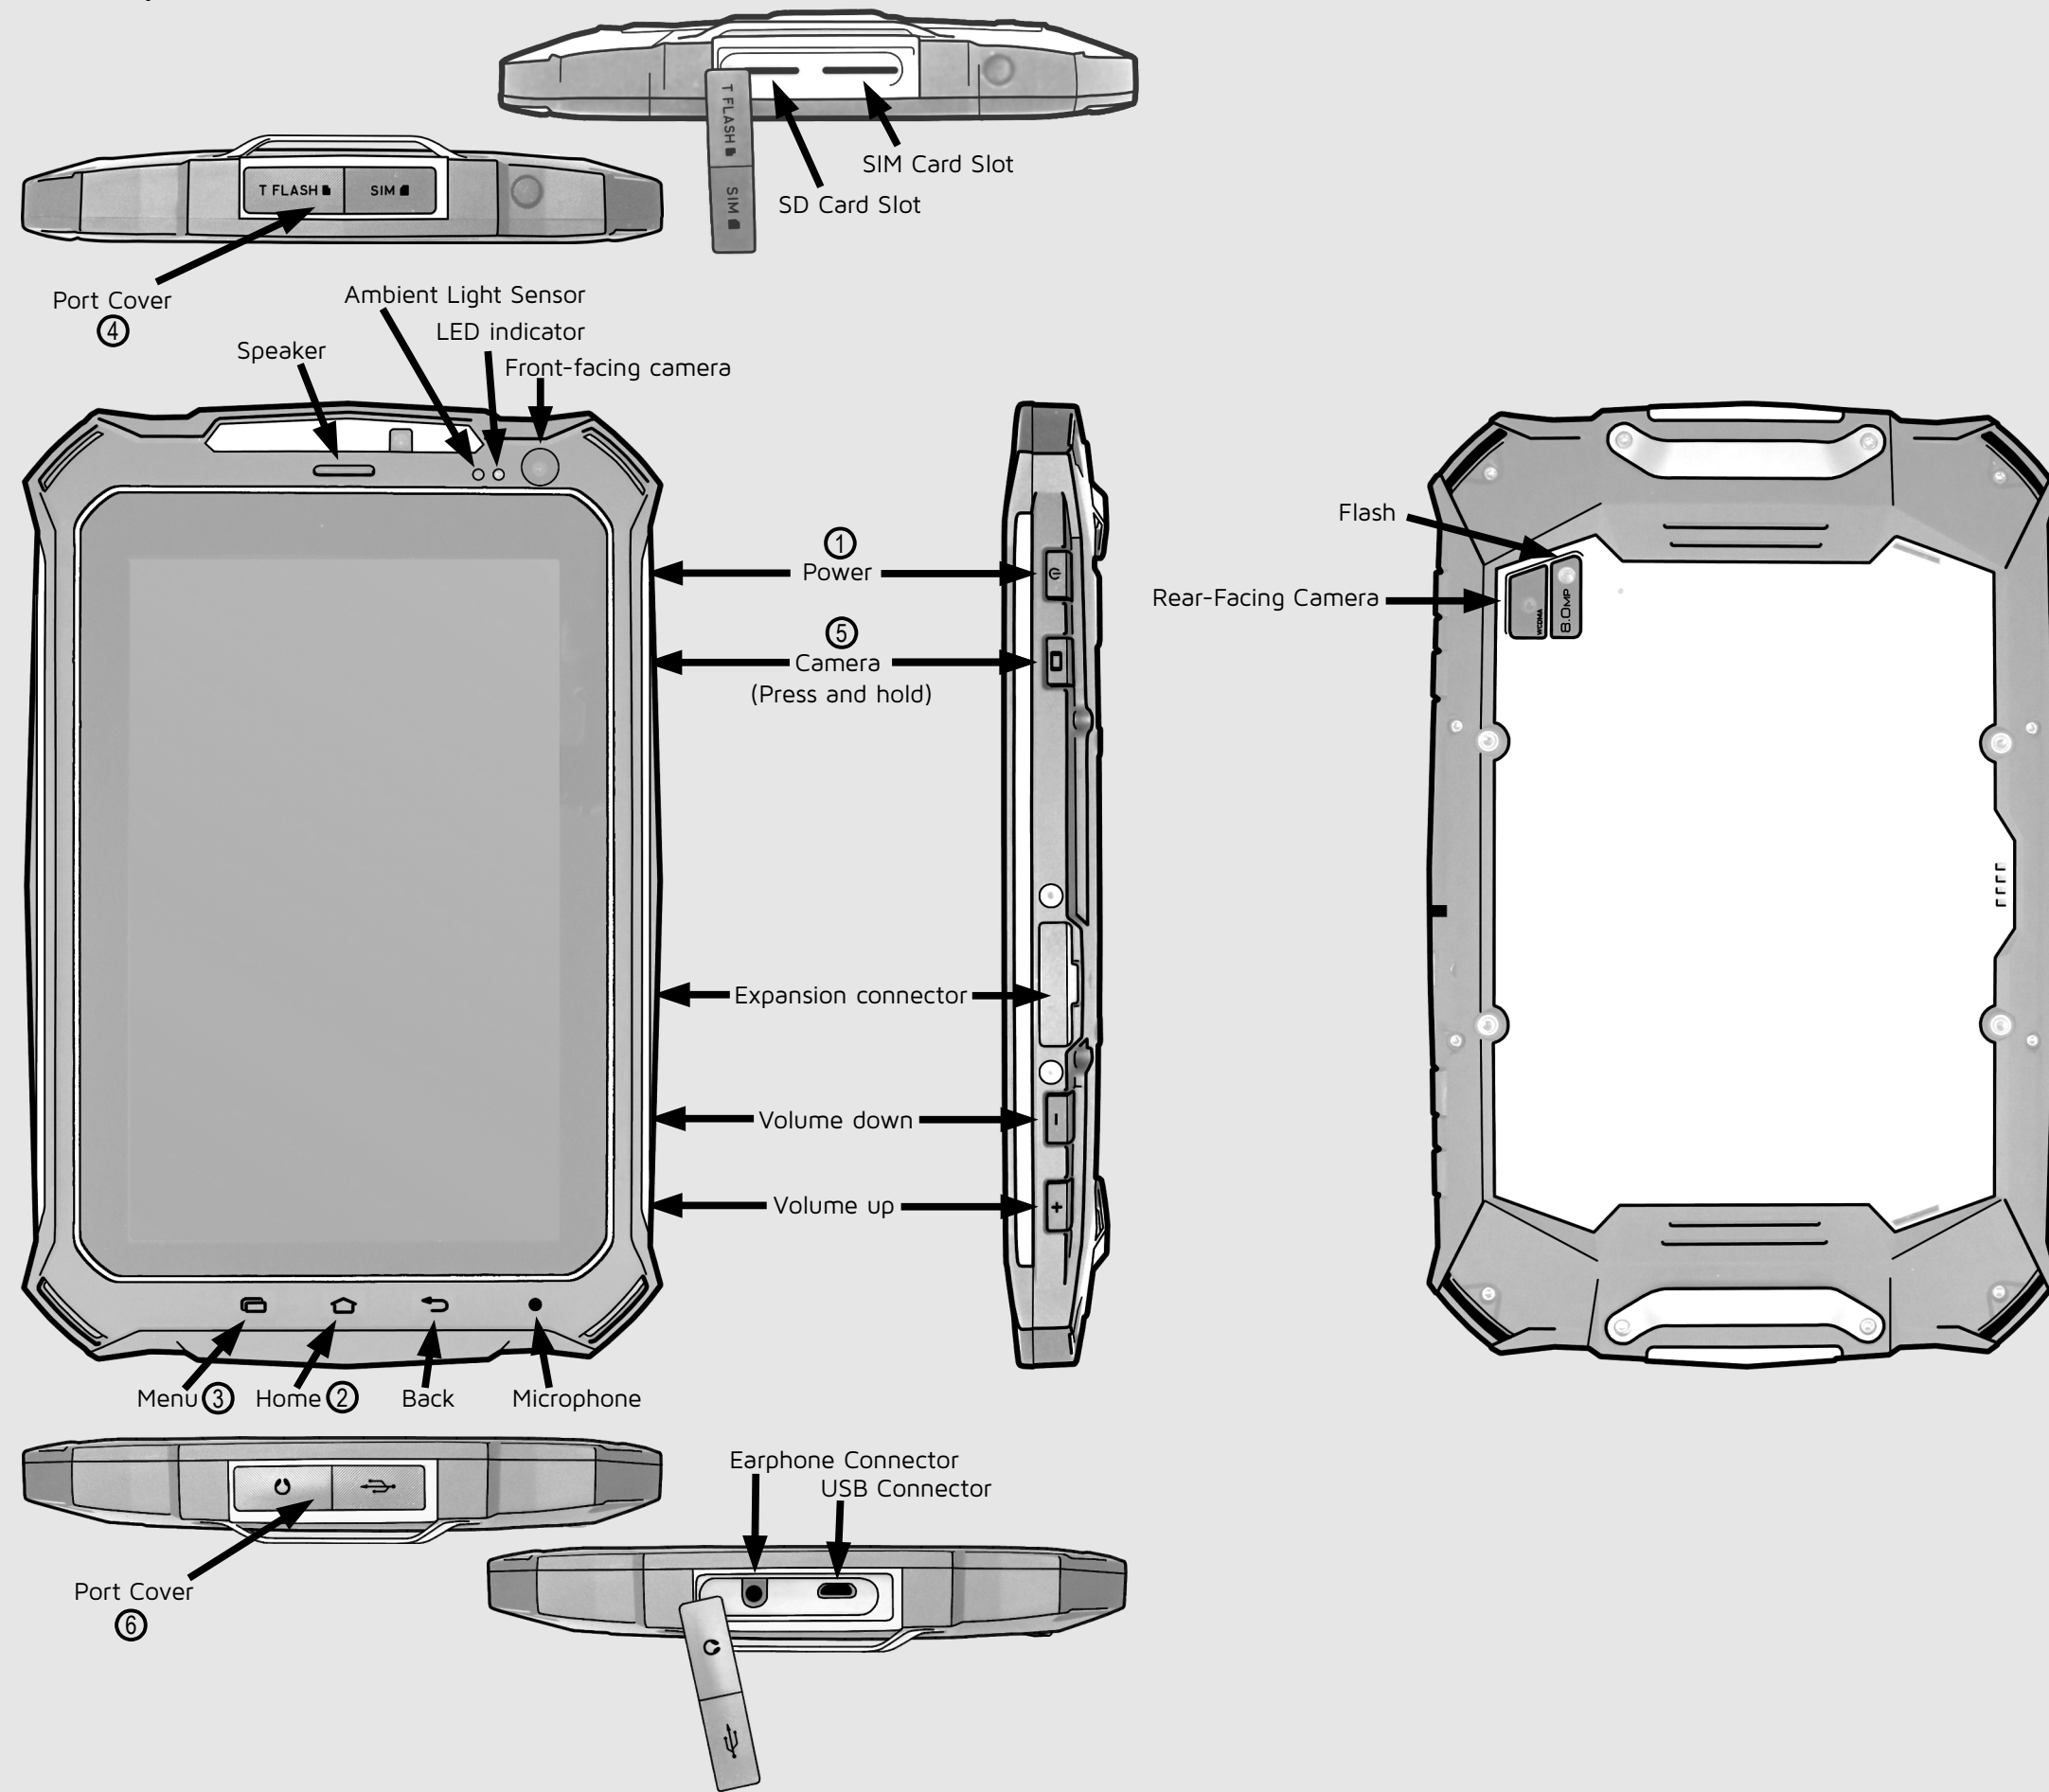 

## What's In The Box

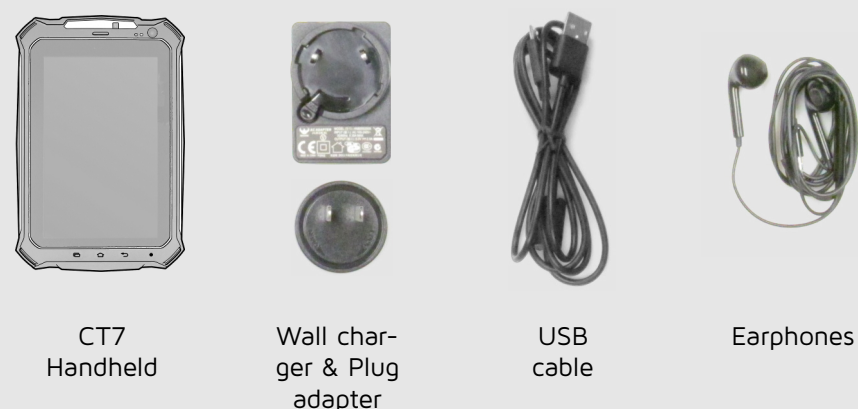 

## Installing an SD Card or a SIM card (see instructions at right)

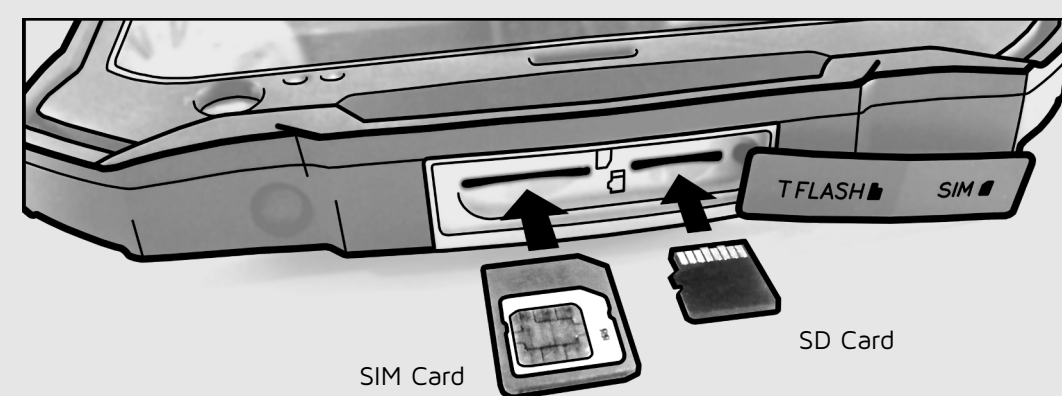 

## Adding your Google Account

- 1) Press the **power** button (1) and wait for the device to boot
- 2) At the **Start** screen, slide to the right and tap **OK**.
- 3) Tap **Settings** on the **Home** screen
- 4) Scroll down to accounts and tap **Add an account**
- 5) Tap **Google** on the **Add an account** screen
- 6) Follow the instructions to setup your Google account

## Accessing Applications

- 1) Press the **Home** button (2)
- 2) Tap the **Application** icon (3) at the bottom of the **Home** screen
- 3) All applications installed on your device will be shown.
- 4) Tap and hold the icon for any application to create a shortcut on the **Home** screen.
- 5) Tap **Play Store** to find and install new applications.

## Accessing Widgets

- 1) Press the **Home** button (2)
- 2) Tap the **Application** icon (3) at the bottom of the **Home** screen
- 3) All applications installed on your device will be shown.
- 4) Tap **Widgets** at the top of the **Application** screen
- 5) Tap and hold the icon for any widget to install it on the **Home** screen

## Indicators



Voicemail Bluetooth WLAN Cellular Data Speed Battery  
NOTE: H (HSPA) is the highest data speed followed by 3G and E (edge)

## Connect to Wireless LAN

- 1) Press the **Menu** button (3)
- 2) Tap **System settings**
- 3) Tap **OFF** on the WLAN line to turn WLAN on. The WLAN indicator will appear at the top of the screen and WLAN will read **ON**.
- 4) Tap **WLAN** to view the list of nearby networks and connect to a specific network.
- 5) Tap on the network you want to access

## Connect a Bluetooth device

- 1) Press the **Menu** button (3)
- 2) Tap **System settings**
- 3) Tap **OFF** on the Bluetooth line to turn Bluetooth on. The Bluetooth indicator will appear at the top of the screen and Bluetooth will read **ON**.
- 4) Tap **Bluetooth** to view the list of nearby Bluetooth devices
- 5) Tap on the device you want to access
- 6) NOTE: If you are connecting another device to the CT7, toggle **Not visible to other Bluetooth devices** to make your device discoverable.

**WARNING:** Ensure that the top (4) and bottom (6) port covers are clean and securely seated before exposing the unit to water. Failure to perform this step could lead to water damage of the unit.

## Installing a SIM card

- 1) Rotate the device so it is oriented as shown in the **Installing an SD Card or a SIM Card** figure below left
- 2) Remove the port cover (4) at the top of the device
- 3) Orient the SIM card so that the contacts are facing toward you
- 4) Orient the SIM card so the notch is located in the top right corner (See the figure at lower left.)
- 5) Gently push the SIM card into the device with tweezers, fingernail, or toothpick until you hear a click. The SIM card will be retained in the unit. NOTE: Forcing the card into or out of the slot could damage the unit. If the card does not seat properly, check the orientation and try again.
- 6) To remove the SIM card, gently push on the card until you hear a click. The SIM card will be ejected from the device. NOTE: The CT7 only accepts full-sized SIM cards. If your cellular carrier provides you with a micro SIM, you will need to insert the micro SIM into a SIM card adapter before using it in your device.

## Installing an SD card

- 1) Rotate the device so it is oriented as shown in the **Installing an SD Card or a SIM Card** figure below left
- 2) Remove the port cover (4) at the top of the device
- 3) Orient the SD card so that the contacts are facing toward you (See the figure at lower left.)
- 4) Orient the SD card so the contacts are nearest the unit (See the figure at lower left.)
- 5) Gently push the SD card into the device until you hear a click. The SD card will be retained in the unit. If the card does not seat properly, check the orientation and try again.
- 6) To remove the SD card, gently push on the card until you hear a click. The SD card will be ejected from the device. NOTE: The CT7 only accepts microSD cards. Larger SD cards (i.e. full-sized or miniSD) are not compatible with this unit.

## Sending a Text Message

- 1) Press the **Home** button (2)
- 2) Tap on the **Messaging** icon (3) on the **Home** screen
- 3) Tap on the plus symbol at the bottom left of the screen
- 4) Enter the phone number of the person you are texting in the 'To' box
- 5) Type the text message
- 6) Tap the send icon (paper airplane) at the bottom right

## Operating the Camera

- 1) Press and hold the camera button (5) for 7 seconds
- 2) Compose the photo using the zoom slider at the bottom of the **Camera** screen
- 3) Tap the camera icon in the bottom right to use the front facing camera
- 4) Tap the '...' icon to access additional settings such as flash
- 5) Press the camera button (5) or tap the blue capture icon to take the picture.
- 6) You can capture video with sound by tapping the video icon at the bottom-left of the screen. NOTE: The video files will be stored on the SD card.

## Support

Web: [www.cedartreetechnologies.com/support](http://www.cedartreetechnologies.com/support)  
Email: [support@cedartreetechnologies.com](mailto:support@cedartreetechnologies.com)



Cedar Tree Technologies  
1220 NW Kings Blvd • Corvallis, OR 97330 • 541-230-1206  
[sales@cedartreetechnologies.com](http://sales@cedartreetechnologies.com) • [www.cedartreetechnologies.com](http://www.cedartreetechnologies.com)