

Upgrading to higher output rate on Geode

In order to upgrade the Geode receiver you have, we need specific license information that is in the receiver. It is very easy to obtain, just follow the steps below. Just call us if you need any assistance; we can walk you through it:

This process is best done on your PC. Install Geode Connect to your PC from the Geode Connect PC Download found on our website:

<http://www.junipersys.com/Juniper-Systems-Rugged-Handheld-Computers/support/Downloads/Geode>

1. Turn on your Geode
2. Connect the Geode to your PC via USB, OR connect to the Geode over Bluetooth
3. Launch Geode Connect. Geode Connect will try to connect to the last device it connected to. If it doesn't connect, click the circle at the bottom right of the screen to start a search again until it sees your Geode.
4. Click on the link for your Geode. If you connect over USB, it will be named "Generic NMEA:"



(see pic)

5. Geode Connect will connect to the Geode and the Home screen will appear..



- [illegible]

7. In the data entry field at the bottom of the terminal screen (the white box with the arrow on



8. Type into the data entry field **\$J1** then press SEND. You will see the following appear (some numbers will be different):

10. Next, type **\$JK, SHOW** into the data entry window, and press SEND. You will see the following appear (some numbers will be different):

13. Once the subscription code is generated, we will send an email back with the subscription key. The process is very similar. Connect the Geode to Geode Connect, open the email, copy the subscription key, paste it into the terminal data entry window, and press send. A confirmation will appear.