


mesa™

bumperkit

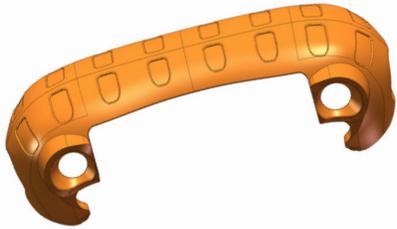

replacement instructions

P/N: 23071.00 Copyright September 2011, Juniper Systems, Inc. Information is subject to change without notice. Juniper Systems and Mesa Rugged Notepad are trademarks of Juniper Systems, Inc.



Contents of Bumper Replacement Kit

The Mesa Rugged Notepad bumper replacement kit includes the following items:

- Standard Mesa: One bumper for the top and one bumper for the bottom (interchangeable)
- Geo Mesa: One extended antenna bumper for the top and one bumper for the bottom,
- Eight screws
- Screwdriver
- Instruction sheet

Replacement Instructions

1. Suspend or power off the Mesa.
2. If a hand strap is attached to the Mesa, remove it.



3. Remove the 8 screws (2 on each corner as shown) that attach the top and bottom bumpers to the Mesa.



4. Carefully remove the bumpers.
Note: If you have a Geo model (shown in above graphic), use caution while removing and installing the top extended antenna bumper to avoid damaging the antenna assembly.
5. Place the new bumpers into position, making sure the screw holes line up on the sides.
6. Insert and screw in 8 screws (2 on each corner as shown in step 3) to attach the new top and bottom bumpers to the Mesa.



7. Reattach the hand strap in the desired location.

