



replacement instructions

P/N: 23066.01 Copyright June 2013, Juniper Systems, Inc. Information is subject to change without notice. Juniper Systems and Mesa Rugged Notepad are trademarks of Juniper Systems, Inc.



Contents of Connector Module Kit

The Mesa Rugged Notepad™ connector module replacement kit includes the following items:


- Connector module
- Four screws
- Screwdriver
- Instruction sheet

Replacement Instructions

1. Suspend or power off the Mesa.
2. If a hand strap is attached to the Mesa, remove it.



3. Place the Mesa display side down on a flat surface.
4. Remove the eight screws (two on each corner as shown) that attach the top and bottom bumpers to the Mesa.

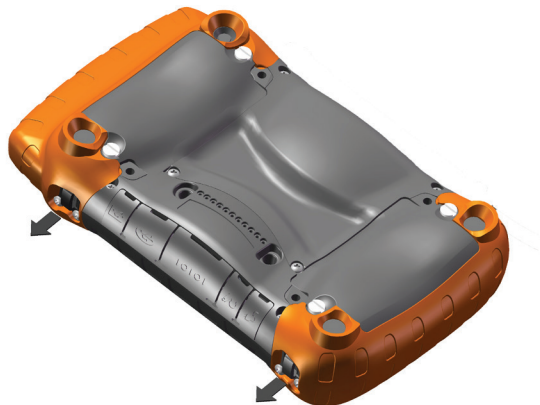

5. Carefully remove the bumpers to allow access to the connector module.

Note: If you have a Geo model, use caution while removing and installing the top extended antenna bumper to avoid damaging the antenna assembly.


6. Remove the four screws on the back of the Mesa that are holding down the connector module (circled below). Set these screws aside for reuse.



7. Remove the connector module. A connector protector is attached to it.



8. Remove the connector protector from the current module and place it on the new connector module (shown from the bottom view below). Make sure it is seated properly on the module.

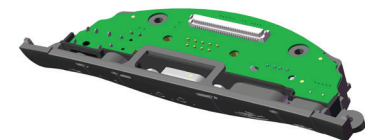

9. Place the new connector module and connector protector on the Mesa, making sure the bottom side of the connector protector is seated properly inside the groove on the case back.
10. Insert the four screws into the back of the Mesa where the module is held in place and screw them in (reverse of step 6).
11. Put the bumpers back into position. Insert and screw in eight screws (two on each corner as shown in step 4) to re-attach the top and bottom bumpers.
12. Test one or more of the connectors to make sure the new module is working.
13. Reattach the hand strap if desired.